


Y12,AL21,AL35 Disassemble Chart

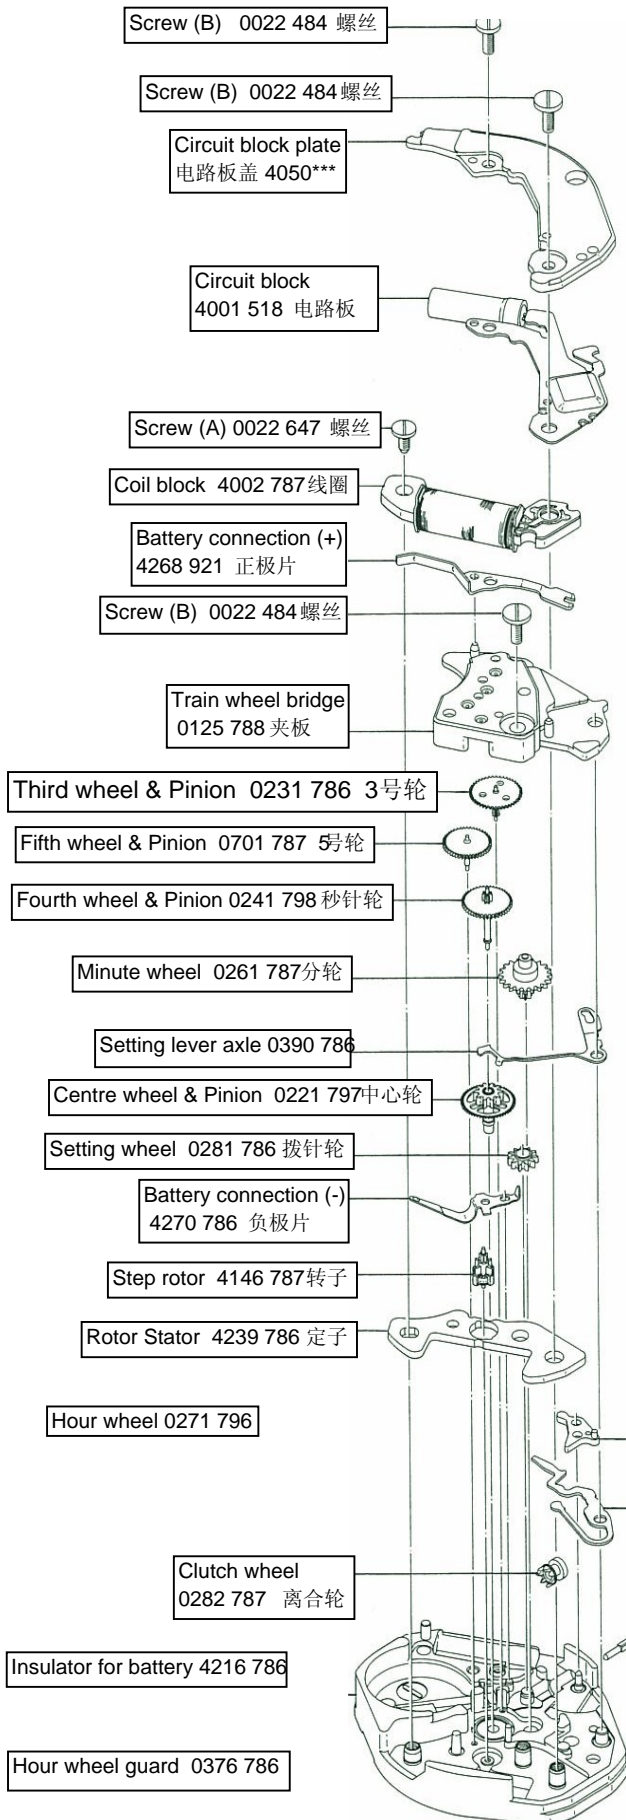


● Lubricating 润滑油
Moebius A

| Center wheel and pinion | Fourth wheel and pinion | Step rotor |
|-------------------------|-------------------------|------------|
| | | |


- Lubricate the above points. It is not necessary to lubricate the other points.
请把润滑油点于上图所示之位置即可。

Notes on handling plastic wheel and pinion


- When removing/fitting the plastic wheel and pinion, do not clamp the shaft with tweezers, etc. Clamp the center of the wheel as illustrated below.
安装或取出齿轮时，不可用镊子夹其轴柱位置，要夹住轮片的位置，如下图。

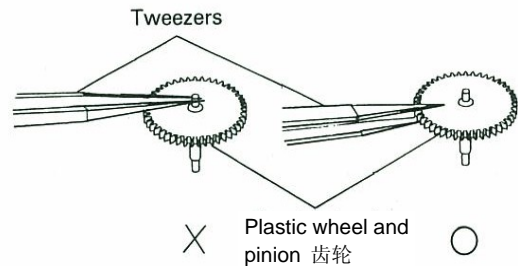

- If the wheel of the rotor is clamped with tweezers, the wheel might be deformed. Clamp the cam or magnetic part with tweezers.
如用镊子夹住转子顶部，转子会变形。要夹住凹轮或带磁的部份。

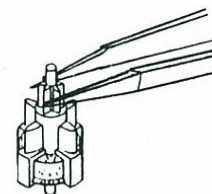

×

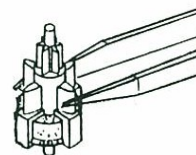

○